

Thank you for purchasing the Bible Phonics Plus.

This manual is designed to show you how to use the tablet and access the many apps and features.

The Bible Phonics tablet contains over 40 different apps with songs, lessons, games and storybooks.


This tablet features the Android 4.4 OS (KitKat).

To access the Google Play Store, you will need to sign in with your Gmail account.


If you don't have a Gmail account, you can create one when you open Google Play. Follow the on screen instructions to create your Gmail account. Please note that an internet connection is required.

Let's take a look at your tablet:

FRONT

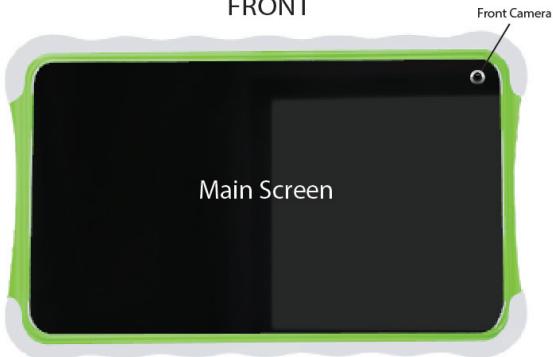

RIGHT SIDE

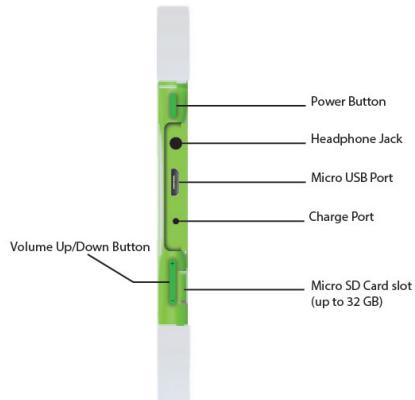

BACK




## STARTUP AND SHUTDOWN


To power on the tablet, press and hold the power button for 5 seconds until you see the Bible Phonics Plus icon appear on a white background.




The tablet will start up and display the lock screen.

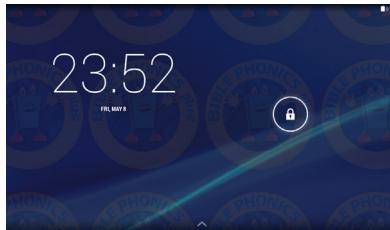


Swipe the lock icon to the right to unlock the tablet to display the main interface.

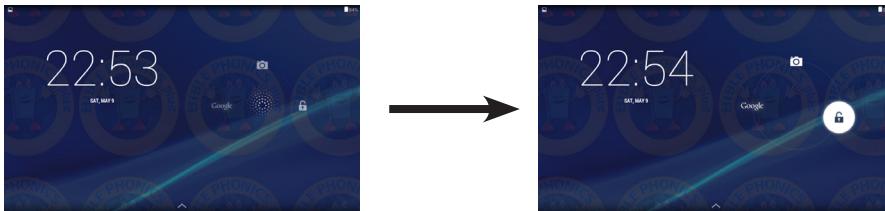

To shutdown the tablet, press and hold the power button for 2 seconds, this will open a small dialogue window. Choose 'Power off' and press 'ok' in the following dialogue window.

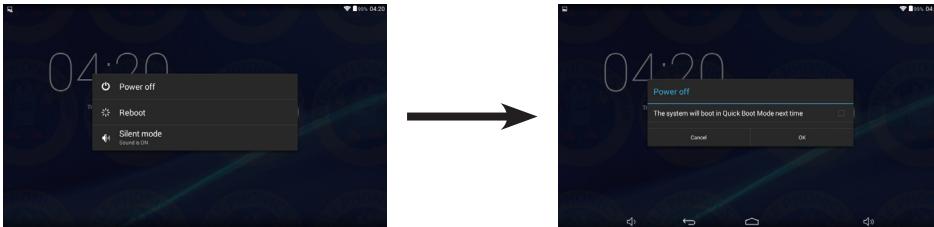


To reboot the tablet, press and hold the power button for 2 seconds, this will open a small dialogue window. Choose 'Reboot' and press 'ok' in the following dialogue window.

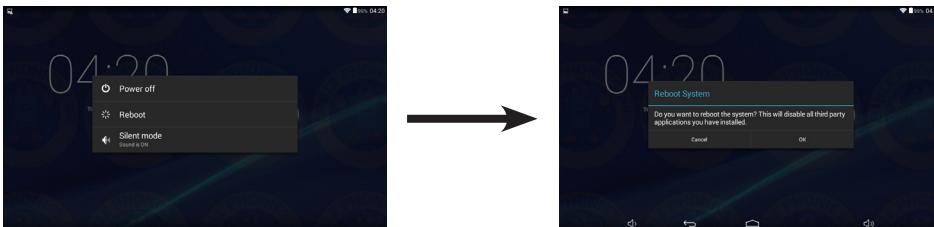

This tablet features a sleep mode. Simply tap the power button and the screen will go blank. Tap the power button again to bring the screen back on.


To save power consumption, the screen has been set to go into sleep mode after 1 minute of inactivity. You can change this in the display section of your tablet's settings.

This is the home screen of your tablet:


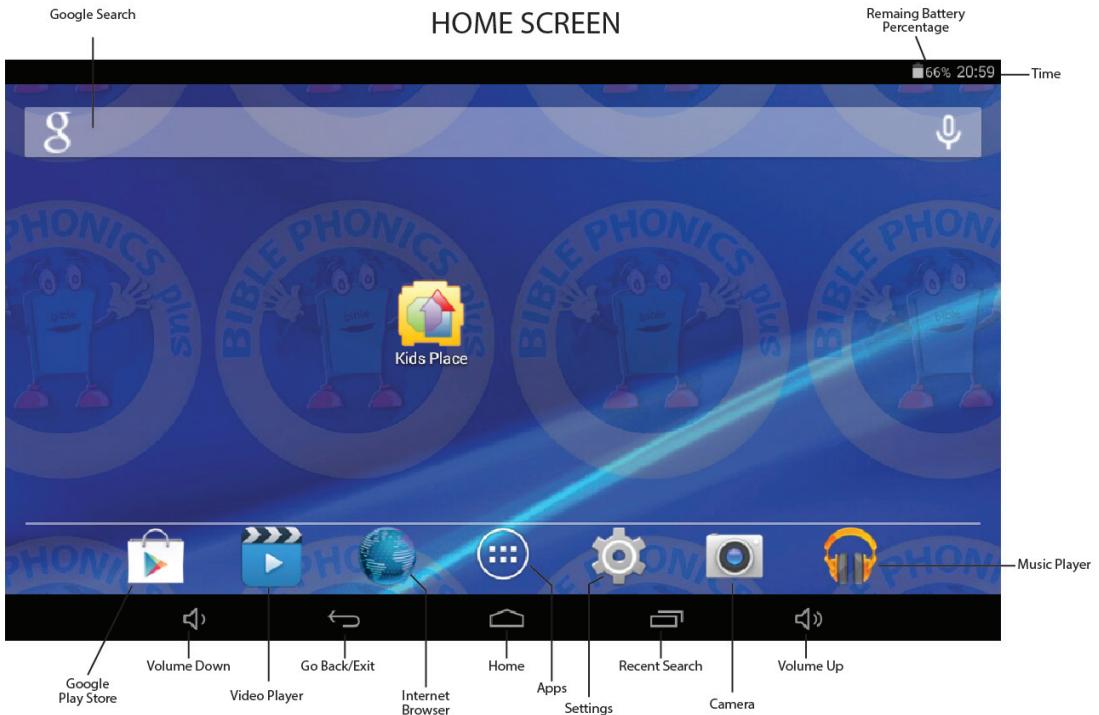


## *INTERNET CONNECTIVITY*

This tablet can connect to wireless hotspot through its wireless connection. To connect to any wireless hotspot, first enable your wireless adapter by going into 'Settings' and press on the 'Wi-Fi' option.

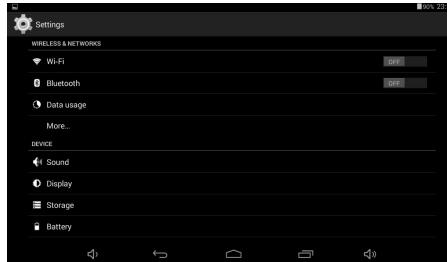


On the top right, slide the button that reads 'OFF' to the right to switch it on. The wireless adapter will switch on and scan for any nearby wireless hotspots to connect to.

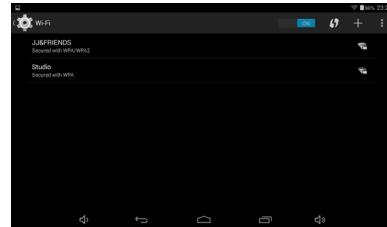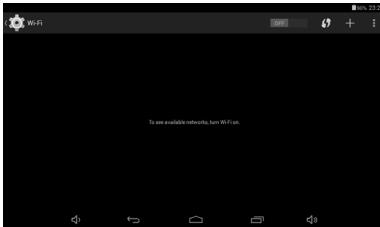

Once you have found your wireless hotspot, select it, enter your password using the virtual keyboard that pops up. Press 'DONE' on the keyboard and then press 'OK'.

## *KIDS PLACE AND PARENTAL CONTROL APP*

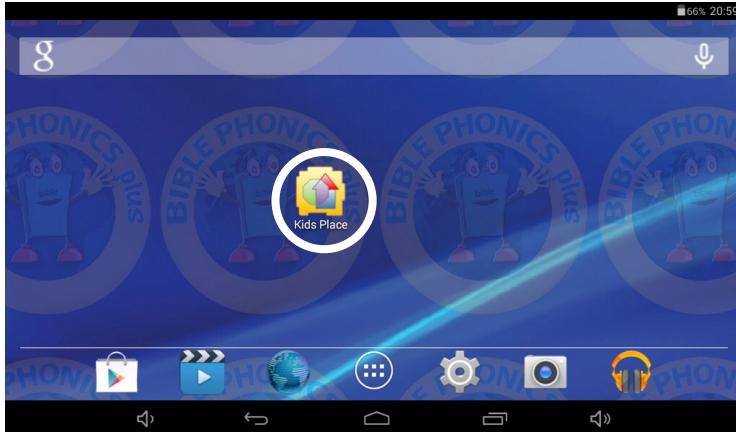

The Kids Place Parental Control app is an app launcher with parental controls & child lock that restricts kids to apps you have approved. Kids Place Parental Control app also prevents children from downloading new apps, making phone calls, texting or performing other actions that can cost you money.

You can use the App to restrict YouTube videos content, website content and even pictures and music. Timers can be set as well to allow your child to use the tablet and apps for a set time period of your choosing. Any of these functions and more can be modified in Settings. Please note that an Internet Connection is needed to activate certain restriction plugins. All the apps on this tablet can be launched from the Kids Place Parental Control app.

Press the Kids Place Parental Control App icon to launch it. From there, the Bible Phonics Suite of Apps will be displayed for you to choose.



If you want to exit the Kids place parental app, just press 'EXIT' located on the top right hand corner of the screen. This will bring up a small window asking for a 4-digit pin to exit the app. By default, the pin is 0000. This pin is required when entering settings, making changes and even exiting the app.







